

TYPE III CITIMEDIC AMBULANCES

Crew-tailored Emergency Vehicles




With a legacy and passion to deliver mission-critical durability, Wheeled Coach ambulances are born to perform under the most demanding conditions—and built to be as unbreakable as the spirit of those we serve. That’s why they are truly ***Trusted by the Toughest.***

The redesigned CitiMedic Type III ambulance delivers economy and efficiency to commercial EMS providers, as well as municipal departments. The box is 2” longer than previous models to provide an 8” cab extension for more seat travel and comfort. All available space has been maximized to accommodate the equipment you need for the mission ahead. Ideal for long and short transfers, this new CitiMedic Type III is built on a Ford or Chevy short wheelbase chassis. We also positioned the switches on the curb side wall so crews can conveniently reach them right from their seat—keeping their focus on the patient.

TOP FEATURES



ALL ALUMINUM POLYUREA COATED INTERCHANGEABLE FRONT CONSOLE

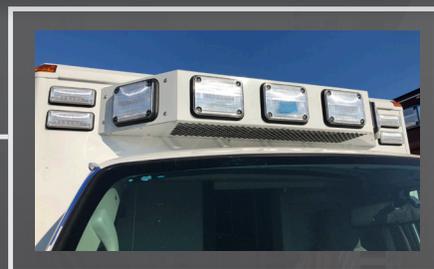

COOL-BAR AND CORNER CAP LIGHTS




CAPABILITY TO HOLD TWO O2 CYLINDERS FOR O2 AND MEDICAL AIR



BACKBOARD AND STAIR CHAIR STORAGE IN THE EXTERIOR COMPARTMENT FOR EASE OF REMOVAL AND TO MAXIMIZE SPACE



SAFETY MINDED CURB SIDE DESIGN – SWITCHES IN EASY REACH OF THE SEATED POSITION ON THE SQUAD BENCH

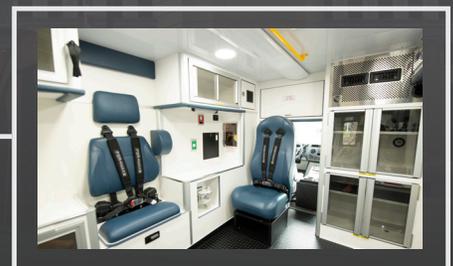

PRE-DESIGNED INTERIOR LAYOUT OPTIONS FOR EASE OF BUILD CONSCIENCE CUSTOMERS

SPECIFICATIONS

Type III CitiMedic Model Specifications

	Chassis	Model	Length	Width	Headroom
Ford	E350	3148	148"	90"	68"/72"
Chevy	G3500	3148	148"	90"	68"/72"

Standard Features

- | | | |
|--|---|--|
| <ul style="list-style-type: none"> • 20 year structural body warranty • Black polyurea coated thresholds • Trimark full floating automotive style compartment and entry door handles • All aluminum modular body built in house • Lonplate II raised diamond plate vinyl flooring • Relay Plex electrical system | <ul style="list-style-type: none"> • Aluminum console with black polyurea finish • Multiple Interior Std designs to choose • Per4Max seat belt system • REV Comfort high back for the attendants seat • Aluminum Diamond Plate Compartment • C Channel extruded rub rails with reflective tape • 8" standard seat travel in cab - more room crew comfort | <ul style="list-style-type: none"> • SafePASS emergency egress lock releases on side and rear patient entry doors • Single sheet seamless construction, no exposed door jambs • Large Handicap style grab handles on side and rear doors with safety yellow coating • Curbside switch panel for crew safety and ease • Seamless contoured upholstery cushions for comfort |
|--|---|--|

WHEELED COACH FEATURES

Wheeled Coach is an industry leader in product innovations that protect the occupants while providing long life and durability. Our Type III CitiMedic ambulances include these built-in features.

Safeguard Box Frame™

Using advanced processes that ensure the highest quality, repeatable results and precision, we build a highly reinforced, but ultra-light roll cage superstructure with strategically positioned metal bars, creating one of the strongest, safest and most durable ambulance bodies around.

AntiCor™ Protection System

Layer upon layer of anti-corrosion features that stand up to the most demanding conditions.

ToughCoat™ Paint Process

Our unique nine-step process employs precision application standards centered around a revolutionary high-tech primer with adhesion and anti-corrosive properties never before achieved for a super tough, long-lasting finish.

TrueForm™ Wall Construction

This precision assembly process incorporates our **StraightLine™ Laser-guided Fixture Alignment** to create accurate, square, repeatable frames that fit every time.

Our network of independent dealers, backed by the Wheeled Coach team and REV Finance, are ready as your first line of defense when you need support. Contact our sales team at **1-800-422-8206** or find your local dealer at: wheeledcoach.com/ambulance-dealer-locator.

