

TEXAS EDITION AMBULANCES

Crew-tailored Emergency Vehicles



With a legacy and passion to deliver mission-critical durability, Wheeled Coach ambulances are born to perform under the most demanding conditions—and built to be as unbreakable as the spirit of those we serve. That's why they are truly ***Trusted by the Toughest.***

The Texas Edition Type I ambulance is built tough for the rigors of fire departments and their lifesaving missions. Designed to perform in unforgiving hot climates, it features a 110/12V HVAC heating and cooling system with patented Cool-Bar™ technology. A second condenser and added evaporator maximize cooling of the module, which stays cold even with the doors open. The ambulance is built with severe weather package insulation to help support the AC and keep cold air in the module. Exterior space is maximized with multiple storage compartments. With the Texas Edition Type I ambulance, crews can keep cool even under pressure.

TOP FEATURES




COOL-BAR™



HORIZONTAL STAIRCHAIR STORAGE ON THE STREET SIDE OF MODULE



ANGLED SHORELINE ON THE FRONT OF THE MODULE FOR EASIER ACCESS

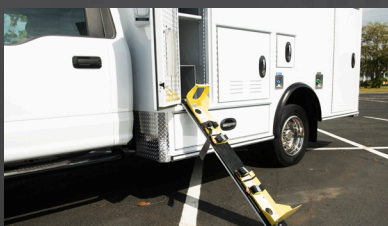

O2 ON SLIDE OUT MOUNTING SYSTEM FOR EASE OF CHANGING BOTTLES



SECOND EVAPORATOR AND COMPRESSOR FOR EXTRA COOLING CAPABILITIES



SPACIOUS INTERIOR DESIGN

SPECIFICATIONS

Texas Edition Model Specifications

	Chassis	Model	Length	Width	Headroom
Ford	F350/F450 169" wb	1153TX	153"	98"	67" / 72"
Ford	F450 /F550 193" wb	1170TX	170"	98"	67" / 72"
Dodge	4500/5500 169" wb	1153TX	153"	98"	67" / 72"
Dodge	4500/5500 193" wb	1170TX	170"	98"	67" / 72"

Standard Features

- | | | |
|--|---|--|
| <ul style="list-style-type: none"> • 47" aisle width • All aluminum interior cabinets • Liquid spring suspension • Maximized interior and exterior compartments • Extended action area and CPR seat • Per4Max seat belt technology • External electrical compartment • Horizontal stairchair storage | <ul style="list-style-type: none"> • Horizontal O2 mounting system on slide out bracket • Backboard storage on rear of the ambulance • 20 year structural body warranty • Black Polyurea coated thresholds • Free floating automotive style entry and compartment door handles • All-aluminum body built in house • All aluminum front console | <ul style="list-style-type: none"> • Seamless upholstery and contoured cushions for more comfort • Single sheet seamless construction, no exposed door jambs • SafePASS emergency egress lock releases on side and rear patient entry doors • 110/12V HVAC with Coolbar • 2nd evaporator with additional compressor • Polyurea coated compartments |
|--|---|--|

WHEELED COACH FEATURES

Wheeled Coach is an industry leader in product innovations that protect the occupants while providing long life and durability. Our Texas Edition ambulances include these built-in features.

Safeguard Box Frame™

Using advanced processes that ensure the highest quality, repeatable results and precision, we build a highly reinforced, but ultra-light roll cage superstructure with strategically positioned metal bars, creating one of the strongest, safest and most durable ambulance bodies around.

AntiCor™ Protection System

Layer upon layer of anti-corrosion features that stand up to the most demanding conditions.

ToughCoat™ Paint Process

Our unique nine-step process employs precision application standards centered around a revolutionary high-tech primer with adhesion and anti-corrosive properties never before achieved for a super tough, long-lasting finish.

TrueForm™ Wall Construction

This precision assembly process incorporates our **StraightLine™ Laser-guided Fixture Alignment** to create accurate, square, repeatable frames that fit every time.

Our network of independent dealers, backed by the Wheeled Coach team and REV Finance, are ready as your first line of defense when you need support. Contact our sales team at **1-800-422-8206** or find your local dealer at: wheeledcoach.com/ambulance-dealer-locator.

